



BJS' METAL & LUMBER PRODUCTS, INC

62848 Millington Frontage Rd~ P.O. Box 727 ~ Coos Bay, OR. 97420

(541) 267-3721~1-800-342-9435~Fax (541) 267-6246

OREGON BUILDERS REGISTRATION: 80872

## INSTALLATION DATA SHEET

End Lap Information




Roofing 1' Minimum

Siding 4" Minimum

Alignment Point for  
Exact Coverage.

Lap with the wind.

Wind Direction

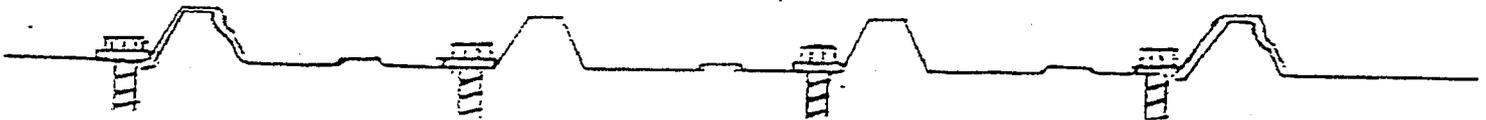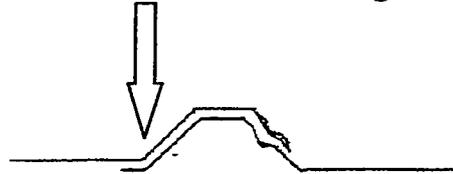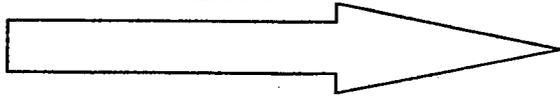

1. The success of these installation procedures will depend upon the proper application, type of lumber and curing of lumber.
2. Use only screws or nails with washers designed for roofing and siding.
3. Nails should have 1 1/2" penetration into wood minimum.
4. Screws are the superior method of fastening.
5. Screws should have 3/4" penetration into wood minimum.
6. Screws or nails should be placed in the flat next to their ribs as shown above.
7. Place screws or nails in rows of three and every two feet up the panel, as per diagram.
8. We do not recommend the use of abrasive wheels or blades. They can create metal chips which become embedded in paint and show up as red rust. This will void warranty.
9. Use only sheet metal shears or tin snips to cut panels.
10. Pre drilling panels is not recommended, this may cause metal chips to stick to paint and show up as red rust. This will void warranty.
11. Keep all panels dry prior to installation. Not storing panels properly will void warranty.
12. If metal panels become scratched use only touch up paint sold by manufacture. (BJS' Metal & Lumber Products)
13. **WARNING:** particles, fumes, and dust may be harmful if inhaled or ingested. Use appropriate protective clothing and face shield.

### FIRST AID

In case of excessive exposure to fumes or particles, remove exposed person to fresh air. Contact physician immediately.